


KEYS, LOCKS & ALARM

Using the Emergency Key Blade

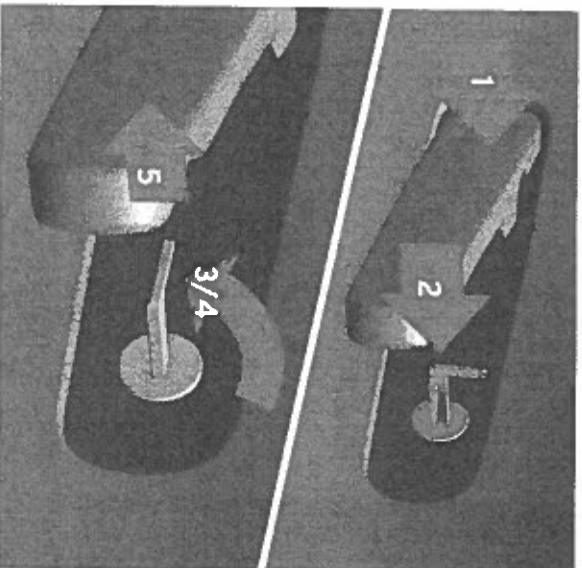

Unlocking the Left-Hand Door

- 1 Press the front of the left-hand side door handle and hold the rear of the handle so that the lock is visible.
- 2 Insert the key blade into the lock.
- 3 Rotate the key blade a quarter turn counter-clockwise.
- 4 Rotate the key blade clockwise to its starting position.

- 5 Remove the key blade from the lock and release the handle so that it is resting against the door.


- Pull the handle and the door will open.
- Once inside the cabin, the right-hand side door can be opened using the interior release handle.

Locking the Left-Hand Door

Perform steps 1, 2, 4 and 5 as shown for unlocking, but rotate the key blade a quarter turn counter-clockwise instead of clockwise as shown in step (3).



NOTE: The right-hand side door will remain in either the locked or unlocked condition the central door locking system was set to prior to keyfob or vehicle electrical failure and cannot be changed until central door locking operation is fully restored.

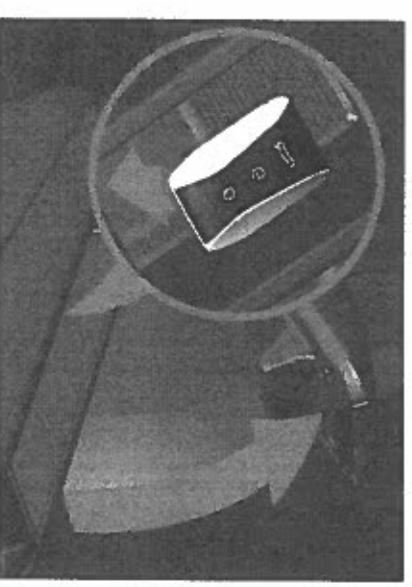

Deactivating the Vehicle Alarm



NOTE: The alarm is triggered when the door is unlocked and opened using the emergency key blade.

- Place the keyfob in the recess towards the rear of the storage area within centre console arm rest.
 - Press the start button.
 - The alarm siren will silence and the alarm is deactivated.
- See pages 187 onwards for starting the vehicle.