

## Air Filter Element - 4 Cylinder


[Operation Code: 42.01.04-02](#)

### Removal

1. Remove engine cover. [Refer to procedure.](#)




2. Remove 6x20 screws (x4) securing ECM to airbox assembly. **Torque 6 Nm.**
3. Move ECM aside to gain access to airbox lid fasteners.

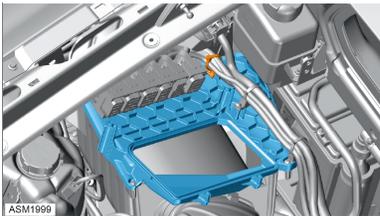


4. Release clip securing ECM harness to airbox lid.



5. Remove 5x20 screws (x3) securing airbox lid to airbox assembly. **Torque 1.2 Nm.**
6. Remove airbox lid from airbox assembly.

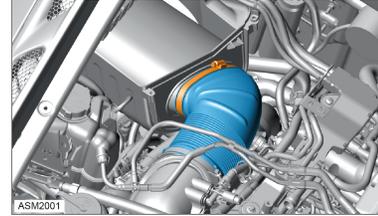

7. Release hose clamp securing air inlet hose to air filter element. **Torque 3 Nm.**
8. Disconnect air inlet hose from air filter element.

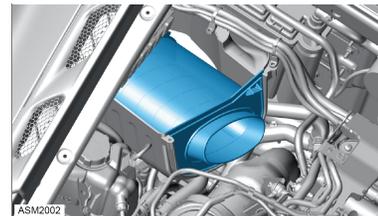

9. Remove air filter element.

### Installation

1. Installation is the reverse of removal procedure except for the following:
2. Clean inside of airbox before fitting new element.